

GEAR REDUCERS


(800) 808-2131 worldwideelectric.com

# Output Flange Installation For WorldWide Electric FHN Series Parallel Shaft Helical Gear Reducers



## FHN-OPF-B14 Assembly Instructions : FHN - FBN

- 1. Remove oil seal from the output end on the opposite of input (Fig. 1).
- 2. Install the output flange kit, parts (-3) (Fig. 2)
- 3. Adjust oil volume and breather plug position based on the mounting position. Refer to the Installation and Operation manual for details.

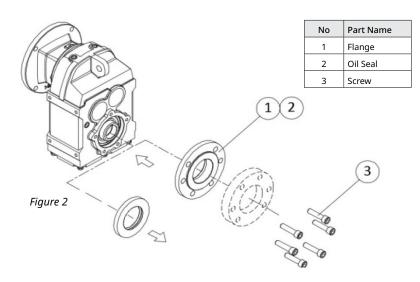

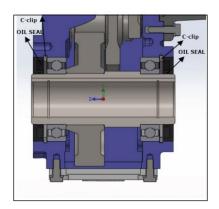


Figure 1

Continued on Next Page



# (800) 808-2131

worldwideelectric.com

Part Name	
Shim/Gasket	
Flange	
Oil Seal	
Washer	
Screw	


#### FHN-OPF-B5 Assembly Instructions: FHN - FMN

- 1. Remove the oil seal and C-clip from the output end opposite the input side.
- Install output flange kit①~⑤(1pc of gasket). After assembly, push on the opposite end of output flange to check if the shaft moves. If it does, add extra① to adjust the gap.
- 3. Remove the output flange kit ①~⑤, and apply silicone on the mating surface of output flange. (Fig.3) Then install the output flange kit back ①~⑤.
- 4. Adjust the oil level and breather plug position according to the installation location.

No	Part Name
1	Spacer
2	Shim/Gasket
3	Flange
4	Oil Seal
5	Washer
6	Screw

### FHN-OPS-S-B5 Assembly Instructions: FHN - FMN (FOR F47/67)

- 1. Remove the oil seal and C-clip from the output end opposite the input side.
- Install output flange kit①~⑥(1pc of gasket and spacer). After assembly, push on the opposite end of output flange to check if the shaft moves. If it does, add extra ②to adjust the gap.
- 3. Remove the output flange kit ①~⑤, and apply silicone on the mating surface of output flange. (Fig.3) Then install the output flange kit back ①~⑤.
- 4. Adjust the oil level and breather plug position according to the installation location.

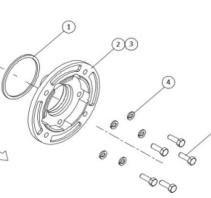

(2)(3)

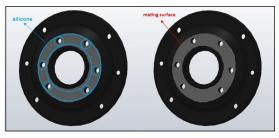


Figure 3



WorldWide Electric Corporation is a leading manufacturer of electric motors, motor controls, gear reducers, and generators. Offering fast, often same-day, shipping from seven regional US warehouses, WorldWide Electric takes pride in providing a competitive edge to our customers by responding to their requirements with urgency, technical expertise, and professionalism. © Copyright 2024 WorldWide Electric Corporation

WorldWide Electric Corporation | 3540 Winton Place, Rochester, NY 14623 USA | Distribution Centers in Allentown, PA | Atlanta, GA | Dallas, TX | Indianapolis, IN | Los Angeles, CA | Seattle, WA | Warrior, AL